

# AIRREMOTE - BRAND CODES

**Brand not listed?** Just use the auto-detect pairing method

Easy instructions inside or watch our 2 minute video



Brand	4 Digit Code (NB: a dash eg: 0001-0005 = try all 5 numbers in this range)
Airwell	0529, 0555, 0556
Arena	0206, 0212, 0229, 0718, 0724, 0741
Arlec	0202
Aussie Air	0809
Aux	0297-0300, 0451, 0474, 0475, 0810-0812, 0960, 0963, 1987
Blueway	0300
Carrier	0203-0209, 0456-0458, 0482-0486, 0563-0565, 0721, 0967, 0969, 1933
Celestial	0108, 0307
Changhong	0301-0308, 0627, 0813-0815, 0820, 1843
Chigo	0379-0382, 0489, 0515, 0890, 0892, 0894, 1403, 1916
Cooline	0187, 0206
Conia	0570, 0571, 0806, 0812, 0861
Daewoo	0203-0209, 0406, 0715-0718, 0818, 0918, 1942
Daikin	0171-0183, 0566, 0567, 0577, 0583, 0685, 0693-0696, 1707
DEC	0504, 0592
Dèlonghi	0232, 0482
Derby	0311
Electra	0553, 0557
Electrolux	0216-0220, 0569, 0728-0733, 1245, 1752
Emailair	0127, 0553, 0556, 0557, 0558, 0639, 0642
Fujita	0265, 0297
Fujitsu	0127-0137, 0464, 0509, 0522-0554, 0640, 0648, 1152
Goldstar	0201, 0466-0469, 0713, 0978, 0979, 0980, 1737
Gree	0309-0316, 0482, 0512, 0513, 0822, 0827, 0830
Haier	0266-0272, 0453-0455, 0778-0781, 0964
Heller	0107, 0282, 0289, 0811
Hisense	0332-0335, 0517, 0847, 1359, 1868
Hitachi	0118-0126, 0500, 0501, 0630, 0631, 0637, 1145
Hotpoint	0371, 0372, 0521, 0883, 0992, 1908
Hyundai	0202, 0433, 0480, 0551, 0609, 0714, 0945, 1226, 1505, 1969
Kelon	0282-0287, 0473, 0485-0488, 0794, 0798, 0802
Kelvinator	0151, 0197, 0203, 0619, 1007, 1024, 1133
Levante	0106
LG	0197-0200, 0504-0514, 0567, 0572, 0710, 1016, 1026, 1733
McQuay	0234-0237, 0465, 0746, 0747, 0903, 1733
Midea	0260-0265, 0522, 0523, 0526, 0533, 0568, 0582, 0773, 0777, 0813, 1289, 1976
Misakae	0379-0382, 0489, 0515, 1403, 1916
Mistral	0237
Mitsubishi	0001-0045, 0476-0479, 0515, 0522, 0523, 0556, 0568, 0582, 0695, 0989, 1502, 1606
NEC	0138-0154, 0200, 0483, 0490-0492, 0653, 0658-0666
Omni	0146, 0262
Omega	0040, 0559
Panasonic / National	0138-0154, 0483, 0490-0492, 0653, 0658-0666, 1507
Polo Cool	0040
PYE	0297-0300, 0451, 0474, 0475, 0810-0812, 0960, 0963, 1987
Samsung	0188-0196, 0503, 0516, 0518, 0700-0707, 1015, 1726
Sanyo	0046-0095, 0519, 0529, 0530, 0558-0562, 0598-0605, 1011, 1016, 1582
Sharp	0096-0106, 0525, 0608, 0609, 0617, 0631, 0994, 1007, 1024, 1640
TCL	0273-0281, 0476, 0493, 0570, 0786-0793, 0861, 1305
Teco	0045, 0109, 0256, 0473, 0474, 0475, 0768, 0986, 1007, 1792
Toshiba	0107-0117, 0479, 0489, 0493-0499, 0561, 0562, 0619-0630, 0815, 0969, 1001, 1011, 1643
Trane	0227-0232, 0598, 0739, 0743, 1768
Uni-Air	0222-0224, 0450, 0734, 0735, 0871, 0962, 1986
Whirlpool	0164-0170, 0502, 0677, 0678, 1760
Winia	0481, 0550, 0993
Yconon	0039
York	0107, 0238-0243, 0573, 0750-0756, 1266